 


SRK-PSE90

Stud Rail Kit for PSE90 Wall Bracket

Installation Instructions

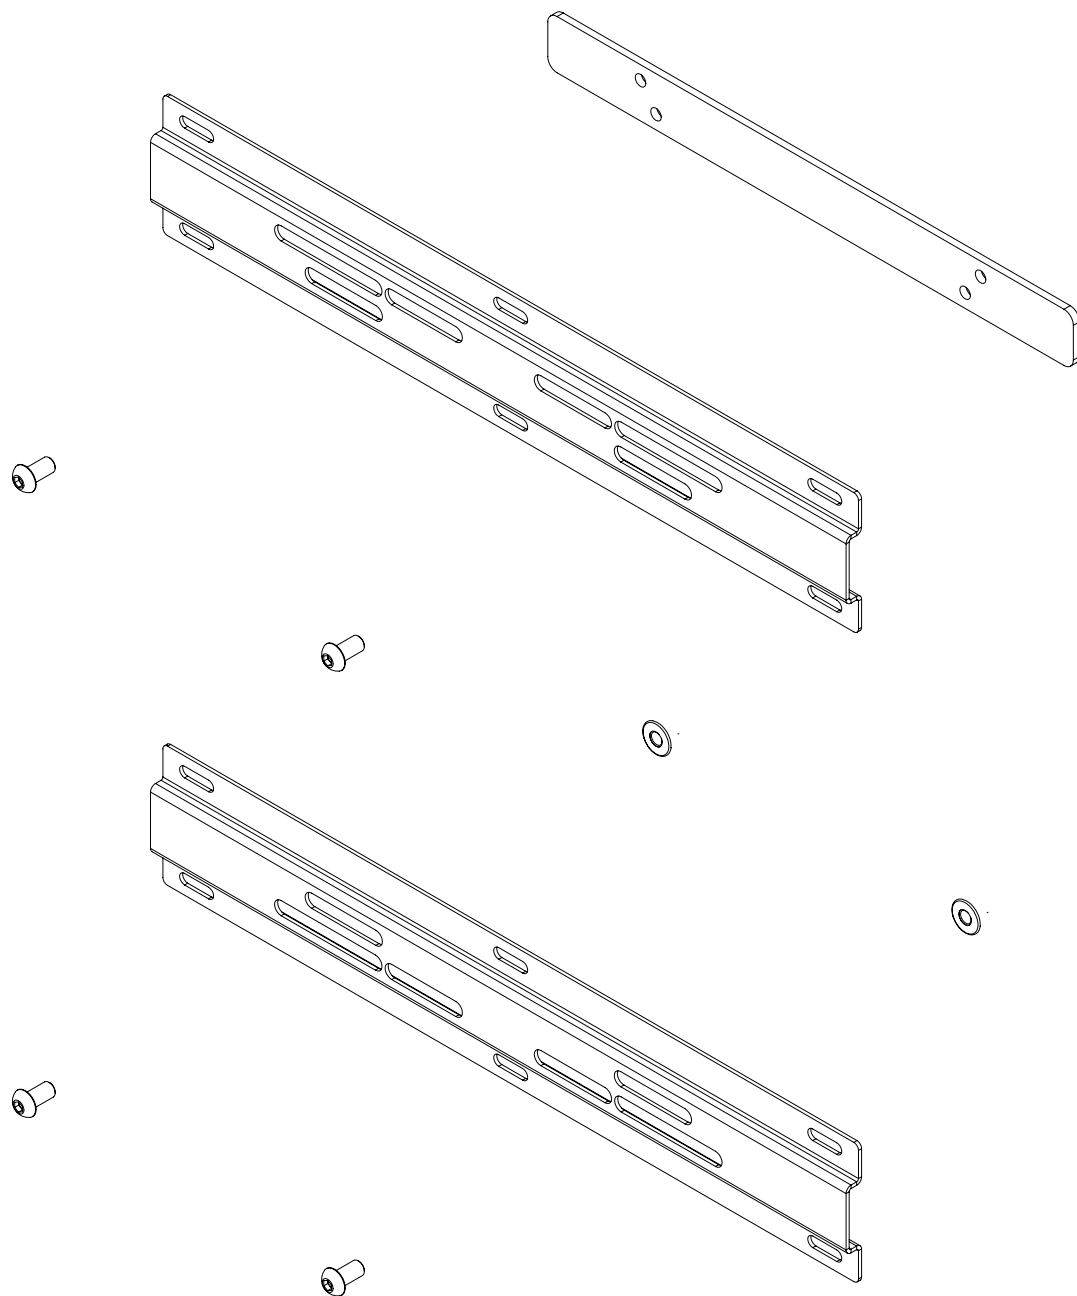

Safety Disclaimer

Safety Disclaimer - Important Safety Instructions

Explanation of graphical symbols:

Electric Shock Symbol - The lightning flash within an equilateral triangle is intended to alert you to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute an electric shock to persons

Caution Symbol - The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product

Tools Symbols - The tools symbol within a coloured square are intended to highlight the required tools necessary for correct and safe installation of the product. These are intended as a guide only, and it is at the installer's discretion as to which tools are used.

WARNING: RISK OF ELECTRIC SHOCK, ONLY AUTHORIZED INSTALLERS TO OPEN THE POWER CONTROL BOX.

WARNING: To reduce the risk of fire or electric shock, do not expose electrical parts to rain or moisture, unless the product has been specifically designed to do so.

WARNING: Failure to provide adequate structural strengthening, prior to installation can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure the structure to which the component is affixed can support the four times the weight of the component.

WARNING: Do not exceed the weight capacity. This can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure that the total combined weight of all attached components does not exceed that of the maximum figure stated.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

Warnings:

1. Read all technical instructions fully before installation and use. It is the installer's responsibility to ensure that all documentation is passed on the end user and read fully before operation.
 2. Keep all documentation.
 3. Heed all warnings.
 4. Follow all technical specifications and instructions during installation.
 5. Do not use near water unless the product has been specifically designed to do so.
 6. Clean only with a dry cloth.
 7. Do not defeat the purpose of the polarized or grounding type plug. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician or contact the manufacturer.
 8. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where the exit from the apparatus.
 9. Unplug the apparatus during lightning storms or when unused for long periods of time.
 10. Only use attachments/accessories specified by the manufacturer.
 11. Refer all servicing to qualified personnel. Servicing is required regularly on an annual basis, when the apparatus is damaged in any way, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 12. To completely disconnect the apparatus from the AC mains, disconnect the power cord plug from the AC receptacle on the power control box.
 13. To prevent overheating, do not cover the apparatus. Install in accordance with the instructions.
 14. UK, Ireland and Hong Kong only – The power cord is supplied with a 13A plug having an earthing pin. The apparatus is earthed and this pin is not required for safety, merely to operate the safety shutter of mains outlet.
 15. No naked flames such as lit candles should be placed on the unit.
 16. Observe and follow the local regulations when disposing of batteries.
 17. Do not expose the unit to dripping or splashing fluids.
 18. Do not place objects filled with liquid, such as vases, on the unit.
 19. Do not expose the batteries to excessive heat such as sunshine, fire or the like.
 20. For all mounted apparatus, the apparatus should be installed on solid wood, bricks, concrete or solid wood columns and battens.
 21. Always turn off power at source before putting on or taking off parts and cleaning.
 22. Do not use outdoors unless marked for outdoor use.
 23. Exceeding the weight capacity can result in serious personal injury or damage to equipment.
-

Future Sound & Vision trading as Future Automation intend to make this and all documentation as accurate as possible. However, Future Automation makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without prior notice or obligation of any kind. Future Automation makes no representation of warranty, expressed or implied, regarding the information contained herein. Future Automation assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Contents

Table Of Contents	
Safety Disclaimer	2
Contents	3
Product Warranty	4
Package Contents	5
Installation Instructions	6
Mounting the SRK to the wall	6
Contact Information	7

Product Warranty

Future Automation - Product Warranty Details

Your warranty covers the cost of labour and spare parts incurred by any defects in materials and workmanship under normal use during a **two year period from date of purchase**.

Under the warranty, we will either solve your problem over the phone, or if the mechanism requires a part, arrange a visit to your premises by a Future Automation approved engineer or send replacement items where appropriate.

Support for any problems that are not hardware faults are excluded from the warranty entitlement.

Warranty repairs will be carried out as rapidly as possible, but subject to parts availability. Working days are Monday to Friday 9.00am – 5.30pm GMT.

This warranty does not affect your statutory consumer rights.

Some things are not covered under warranty, the following is excluded from warranty service:

- Malfunctioning caused by misuse or damage, accidental or otherwise, or service modification by persons not authorised by Future Automation, or the use of any non Future Automation supplied parts;
- Any electrical, or other environmental work external to your Future Automation mechanism including power cuts, surges or lightning strikes;
- Additional items not supplied by Future Automation although they may have been supplied together by the retailer;
- Any 3rd party software products controlling your mechanism;
- Any transfer of ownership. Warranty is provided only to the initial purchaser;
- Compensation for loss of use of the product, and consequential loss of any kind.

Any part of your system that needs to be replaced during a warranty repair becomes the property of Future Automation.

Customer Support - Contact Details

European Office

Address:

Unit 4 The Orbital Centre
Cockerel Close
Gunnels Wood Road
Stevenage
SG1 2NB

Phone: +44 (0) 1438 833577

Email: info@futureautomation.co.uk

Office Hours:

Mon - Fri 8:00 to 17:30 GMT
Saturday & Sunday - Closed

North American Office

Address:

Enterprise Park
127 Venture Drive
Dover
NH
03820

Phone: +1 (603) 742 9181

Email: info@futureautomation.net

Office Hours:

Mon - Fri 7:00 to 17:00 EST
Saturday & Sunday - Closed

Product/Installer Details - **To be Complete By Original Installer**

Installer Contact Details:

Contact Address:

Contact Phone: _____

Contact Email: _____

Original Installation Date: _____

Product Serial Number: _____

Package Contents

 
1 - SRK-PSE90 Mechanism

1.1 - Mount Rail

1.2 - Clamp Plate

1.3 - x4 M8x16 Bolt

1.4 - x2 M8 Flange Nut

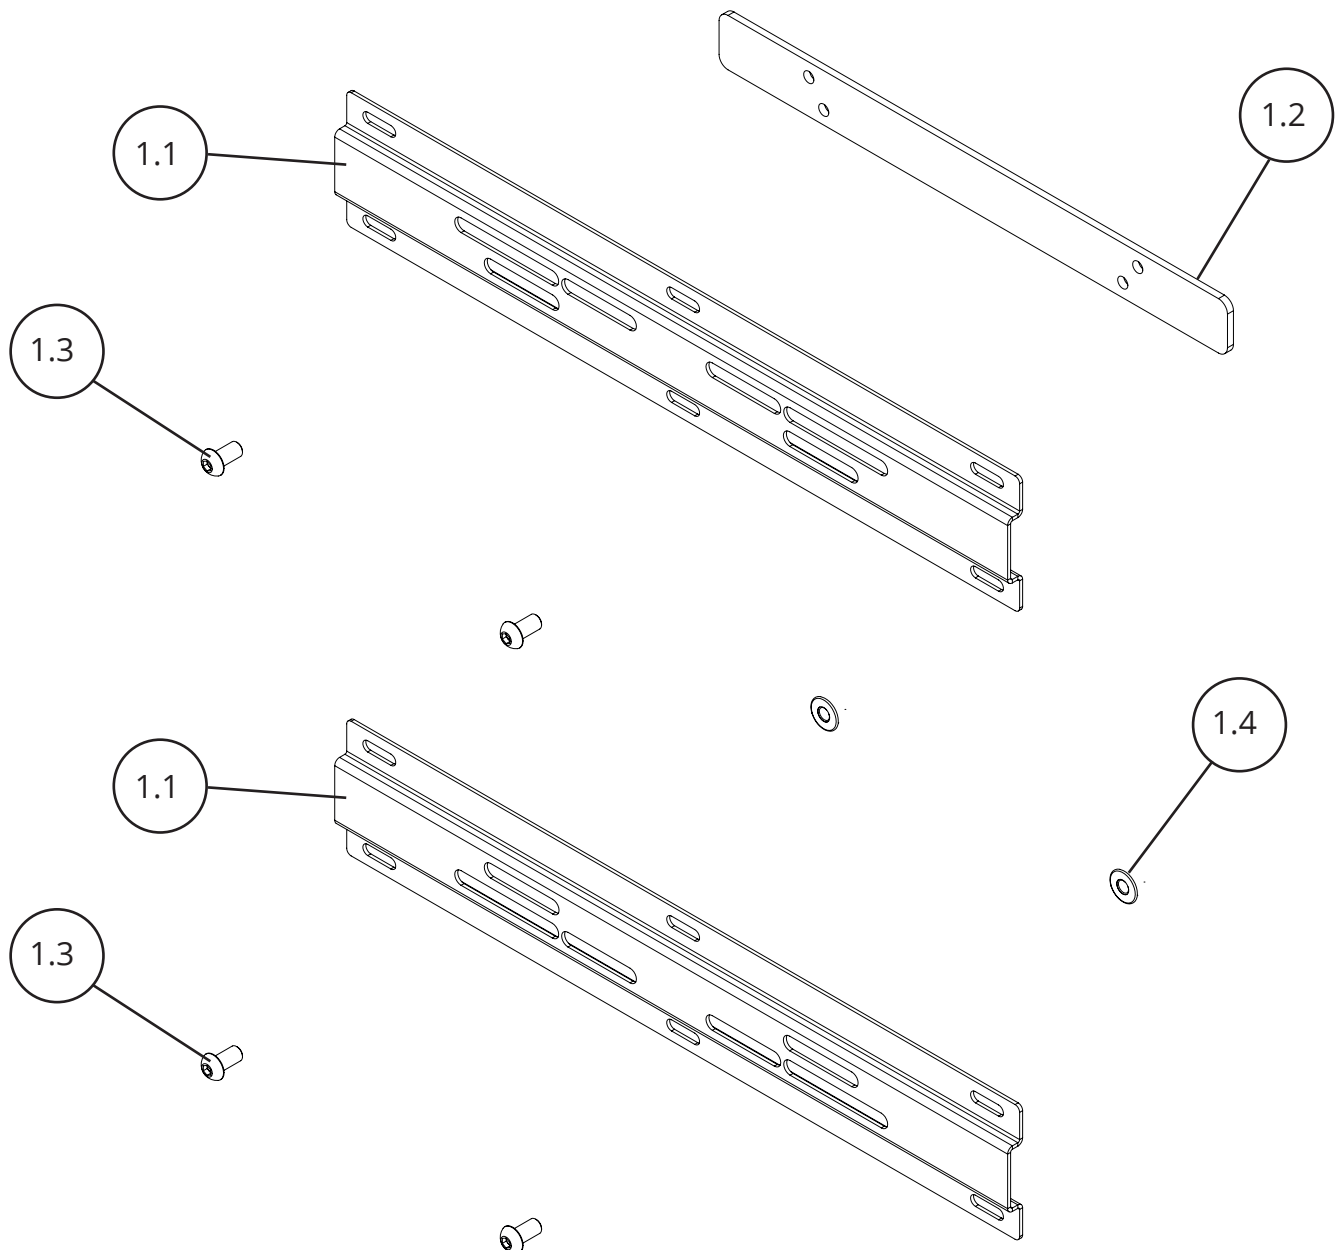

Installation Instructions

Mounting the SRK to the wall

1. Locate studs in wall and mark position of upper Mount Rail ensuring it is level and equidistant between studs (Image 1 Below).
2. Loosely assemble Clamp Plate to upper Mount Rail and secure Mount Rail into studs using suitable screws (not included) (Image 2 Below).
3. Loosely assemble lower Mount Rail to PSE90 bracket through lower holes (Image 3 Below).
4. Hook PSE90 bracket onto upper Mount Rail and set lateral location of bracket on wall (Image 4 Below).
5. Align lower Mount Rail with upper Mount Rail and secure into studs using suitable screws (not included) (Image 5 Below).
6. Tighten up screws to secure PSE90 bracket to SRK, screen can then be installed onto PSE90 bracket (Image 6 Below).

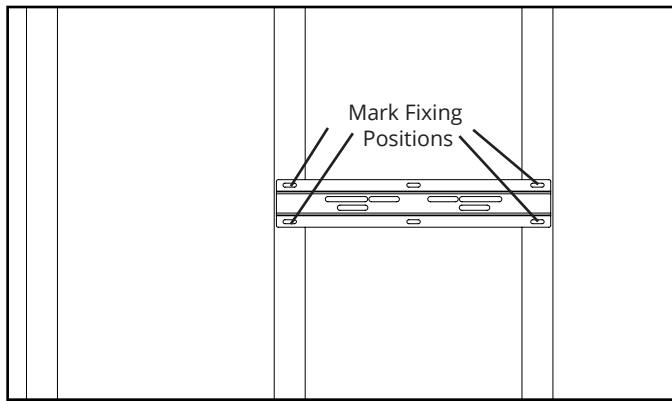 


Image 1.

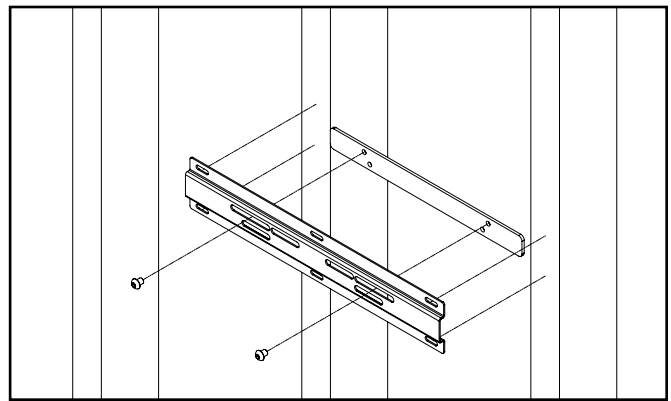 


Image 2.

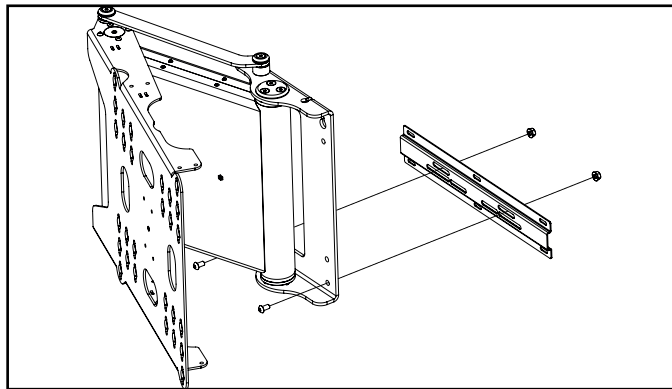 


Image 3.

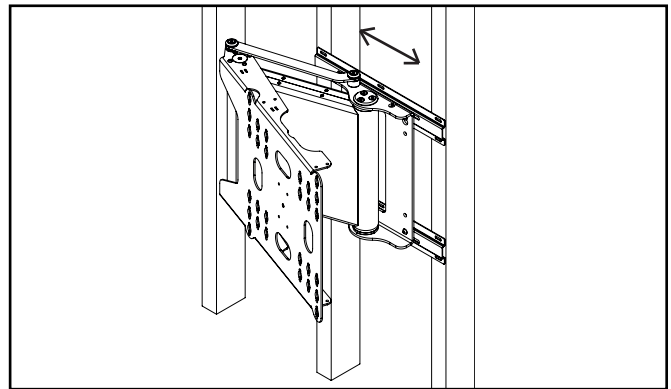 


Image 4.

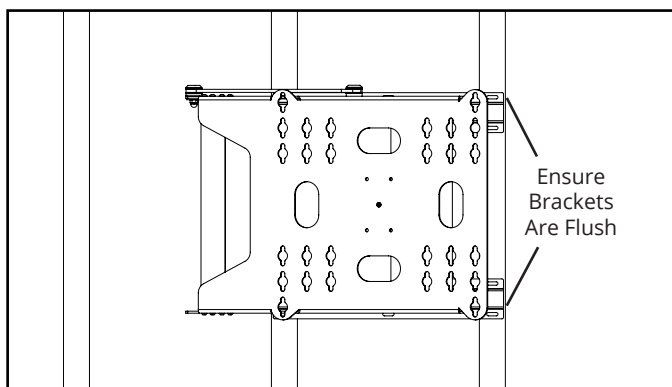 


Image 5.

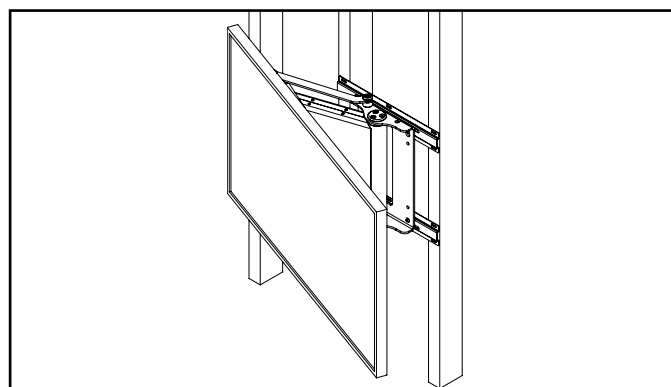 


Image 6.

Contact Information



future automation

European Office

Address:

Unit 6-8
Brunel Road
Bedford
Bedfordshire
MK41 9TG

Phone: +44 (0) 1438 833577

Email: info@futureautomation.co.uk

Office Hours:

Mon - Fri 8:00 to 17:30 GMT
Saturday & Sunday - Closed

North American Office

Address:

Enterprise Park
127 Venture Drive
Dover
NH
03820

Phone: +1 (603) 742 9181

Email: info@futureautomation.net

Office Hours:

Mon - Fri 7:00 to 17:00 EST
Saturday & Sunday - Closed